



## WIRELESS WALL SWITCH

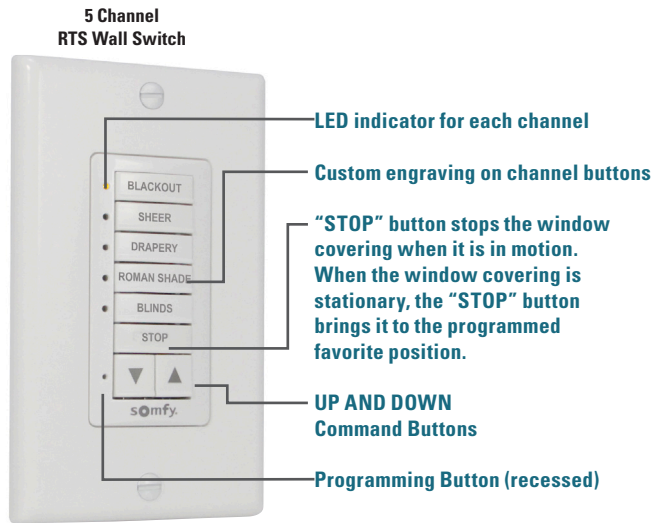

## WIRELESS REMOTE

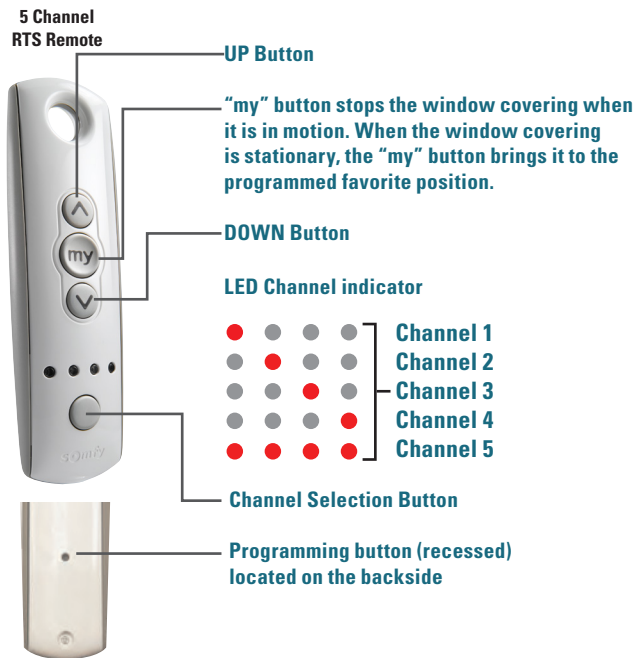

## USER MODE

### Adjusting the Limits in User Mode

#### Lower Limits

##### Step 1:

Press DOWN to send the window covering to its current LOWER Limit.

##### Step 2:

Press and hold both UP and DOWN simultaneously until the window covering jogs. Adjust to a new LOWER limit position.

##### Step 3:

Press and hold STOP/MY until the window covering jogs, to confirm new limit.

#### Upper Limits

##### Step 1:

Press UP to send the window covering to its current UPPER Limit.

##### Step 2:

Press and hold both UP and DOWN simultaneously until the window covering jogs. Adjust to a new UPPER limit position.

##### Step 3:

Press and hold STOP/MY until the window covering jogs, to confirm new limit.

### Setting Intermediate Preferred "MY" Position

#### Step 1:

Press the UP or DOWN to operate window covering. At the desired intermediate "my" position press STOP/MY briefly to stop the window covering.

#### Step 2:

Once the desired "my" position is reached, press and hold STOP/MY until the window covering jogs. The "my" position is now added to memory.

### Activating the "MY" Position

Send the window covering to the "my" position by pressing STOP/MY from ANY window covering position.

Window covering should be stationary prior to activating "my" position function. If window covering is actively moving (in-motion) STOP/MY should be pressed twice.

### Deleting "MY" Position

Activate window covering to intermediate position, then press and hold STOP/MY for 5 seconds. Window covering will jog to confirm deletion of "my" position.

### Adding or Deleting a Transmitter Programmed Transmitter

#### Step 1:

Using an already programmed transmitter, select the transmitter (single channel) or the channel (1-5 of a multi-channel transmitter, or the sensor).

**Step 1 should not be performed with the transmitter intended for deletion.**

#### Step 2:

Using a paper clip, press and hold the PROGRAMMING BUTTON of that transmitter until the window covering jogs.

### Transmitter to Add or Delete

#### Step 1:

Select the transmitter (single channel) or the channel, (1-5 of a multi-channel transmitter, or the sensor) to be added or deleted.

#### Step 2:

Using a paper clip, press and hold the PROGRAMMING BUTTON of that transmitter or sensor until the window covering jogs

## TOOLS NEEDED

- Paper clip (for the program button)