

TOOLS NEEDED



Pencil



Measuring
Tape



Level




Drill with
bits



Screwdriver

INSTALLING A POCKET

SURFACE/WALL MOUNT

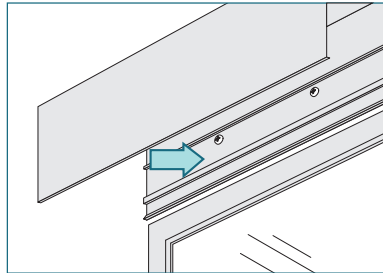


Mount into wood or metal studs or into concrete with concrete anchors. Drywall anchors are not recommended.

Determine the mounting location.

Pre-drill the pocket. Mount in place.


END PLATES

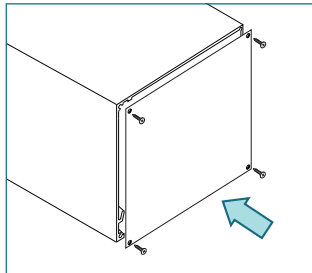

Use a screwdriver to attach the end plates with the screws provided.


BOTTOM CLOSURES

Side View

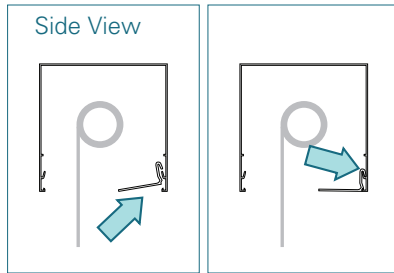

Tilt the bottom closure inside the front edge of the pocket until the closure catches on the inside ledge.


Manual Single Shade

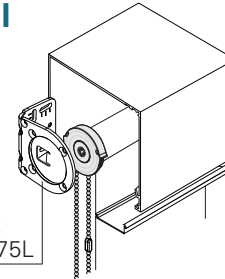

Manual
Bracket
55L or 75L

Surface Mounted
Use bracket and shade instructions for Standard+ & Heavy Duty+ Manual


Motorized Single Shade

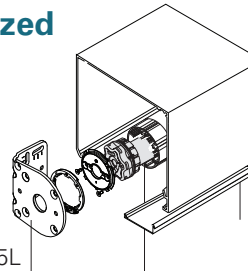

Motor
Bracket
55L or 75L

Surface Mounted
Use bracket and shade instructions for RB 500 Heavy Duty Bracket Motorized

Dual Shade 9" Pocket Only

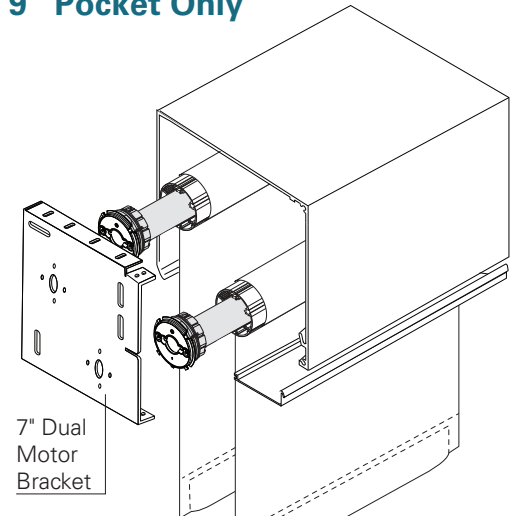

7" Dual
Motor
Bracket

Surface Mounted
Use bracket and shade instructions for Heavy Duty+ 7" Dual Bracket Motorized or Manual

RB 500™

Roller Shades

Sonesse 50 RTS 506S2 & 510S2 Motor with Heavy Duty Brackets in Pocket Motorized Shade Installation Series 5-216

2 of 4

Compatible Motors

LT50 RA 525A2
LT50 Altus RTS 525A2
Sonesse 50 RTS 506S2
Sonesse 50 DCT 506S2
Sonesse 50 RA 506S2
Sonesse 50 RS485 506S2
Sonesse 50 RTS 510S2
Sonesse 50 DCT 510S2
Sonesse 50 RA 510S2
Sonesse 50 RS485 510S2
Sonesse ULTRA 50 RTS 506A2
Sonesse ULTRA 50 RA 506A2
Sonesse ULTRA 50 RS485 506A2
LT50 RS485 515S2
LT50 RS485 535A2
Sonesse ULTRA 50 DC RTS 504A8
Sonesse 50 DC RS485 504A8
Sonesse 30 RTS
Sonesse 30 DCT
Sonesse 30 RS485

TOOLS NEEDED



Pencil



Measuring Tape



Level



Drill with bits



Screwdriver




Allen Key
(provided with optional Leveler)



Pliers

INSTALLING THE BRACKETS

RB 500 HEAVY DUTY BRACKETS IN A POCKET

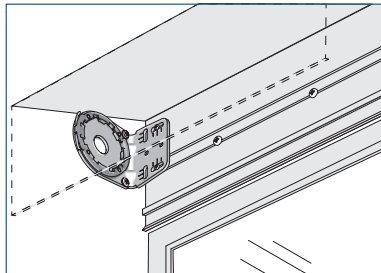



Determine the mounting location inside the pocket.

Measure and mark the bracket locations with a pencil.

Mount brackets with the screws provided. Pre-drilling is recommended.

Check that the brackets are level and aligned.


SCREW COVERS

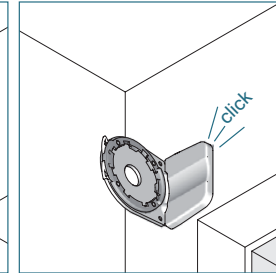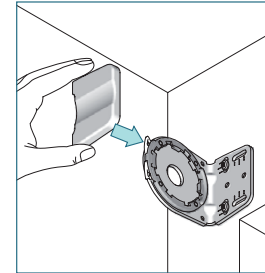


Slide the screw cover cap onto the bracket until it snaps.

OPTIONAL: INTEGRATED LEVELER

IDLE END

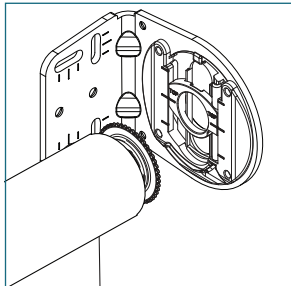

ADJUST LEVELER

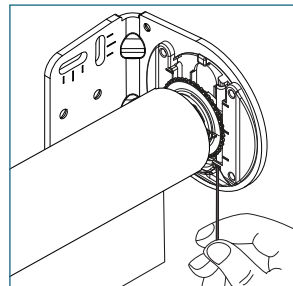

Insert the provided Allen key into the set screw of the leveler.

Adjust skewing by turning the Allen key left or right to move the shade up or down. Support the shade with your hand if necessary.

All adjustments can be made after the shade has been installed and after the operation has been tested.


MOTORS

Sonesse 50 RTS 506S2 & 510S2 120V AC

Plug-In



Quick Disconnect

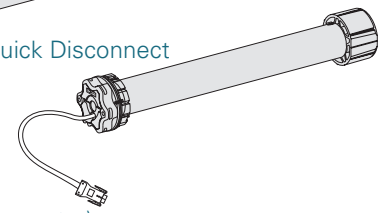

Motor Front Plate
(comes attached to motor)

040419


Las Vegas • Chicago
800.229.5300
HDhospitality.com

© 2018 Hunter Douglas. All rights reserved. All trademarks used herein are the property of Hunter Douglas or their respective owners.

HunterDouglas
Hospitality



INSTALLING THE SHADE - Do not remove the tape around the shade until it is fully installed

INSTALL INTO IDLE BRACKET

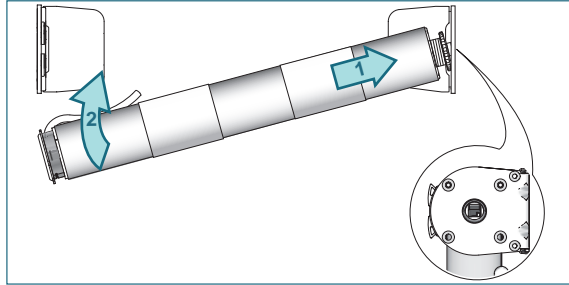

Place the roller shade end plug into the idle end bracket. Push the shade against the idle end and lift the motor end up.

INSTALL INTO MOTOR BRACKET

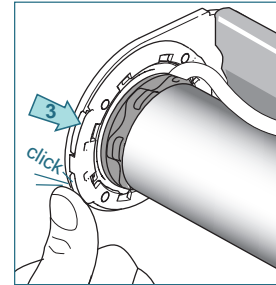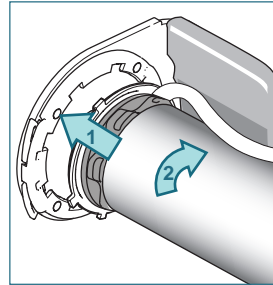


Fit the motor front plate into the motor bracket.

Turn the shade approximately 10° in the rolling direction.


Close both bracket fasteners.

LOCK THE SHADE

UNLOCKED

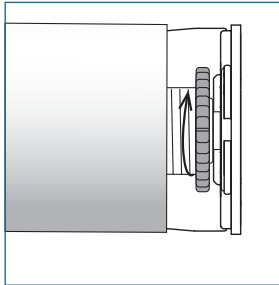


LOCKED

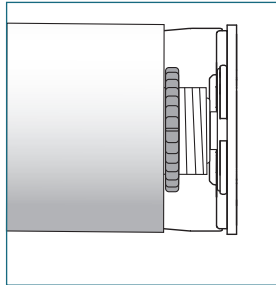

Rotate the nut on the idle end clockwise until it meets the tube. This locks the shade into position.

CHECK SHADE OPERATION


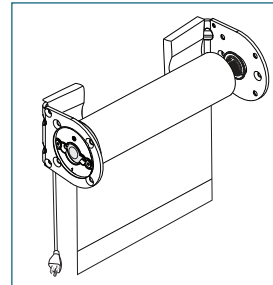


Remove the tape from the shade.

Make sure the shade operates properly. Use separate wiring information per motor type and programming instructions from HDhospitality.com



Adjust leveler if applicable.

BRACKET COVER INSTALLATION

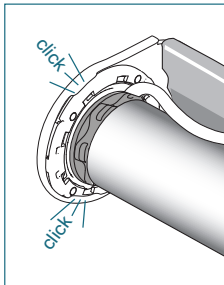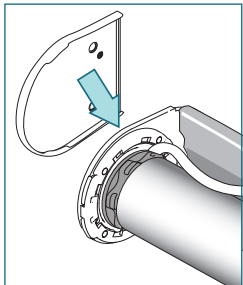

Snap the end caps onto the brackets until it clicks into place.

BRACKET COVER REMOVAL

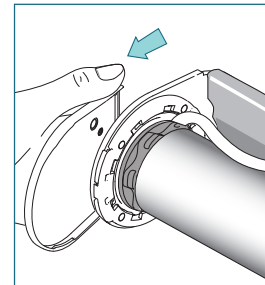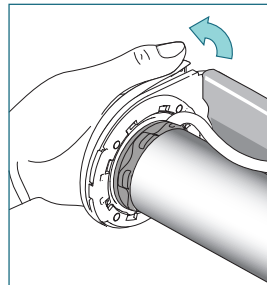

Lift the backside of the endcap away from the bracket, then slide the end cap towards you.


SHADE REMOVAL

DISCONNECT THE MOTOR

Disconnect the power cable from the electrical source.



Unplug from the outlet or disconnect the quick disconnect plug.

UNLOCK THE SHADE

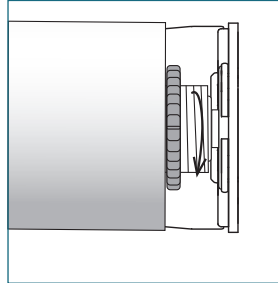

Rotate the nut on the idle end counterclockwise to unlock the shade.

RELEASE THE SHADE

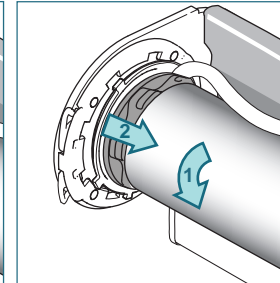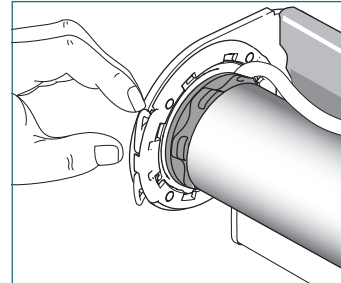


Open the bracket fasteners.

Turn the shade in the roll up direction until the motor front plate releases.

Push the shade in the direction of the idle bracket and slide it out of the bracket.

REMOVE THE SHADE

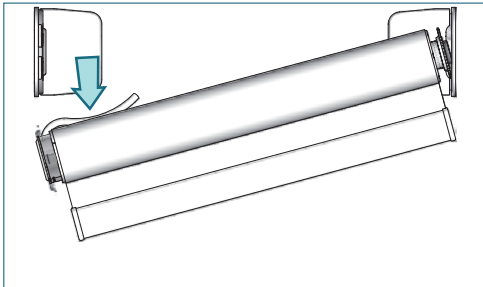

Move the shade downward and out of the brackets.